

## Bike rack assembly 100-22L




## **Tools required**


- 1.Metal drill bit ø10 mm 2.Concrete drill bit ø8 mm
- 3.Socket wrenches 16 and 17 mm
- 4.Ring spanners 16 and 17 mm
- 5.Nutrunner
- 6.Hammer drill for fastening to floor

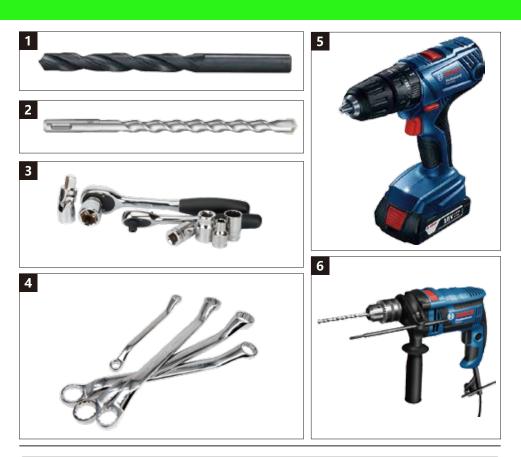


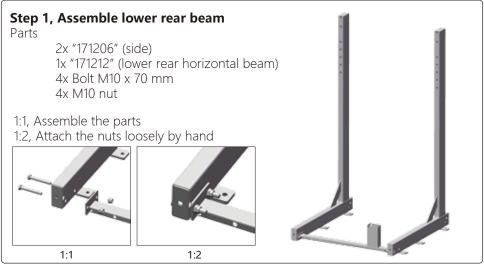


6 - 2

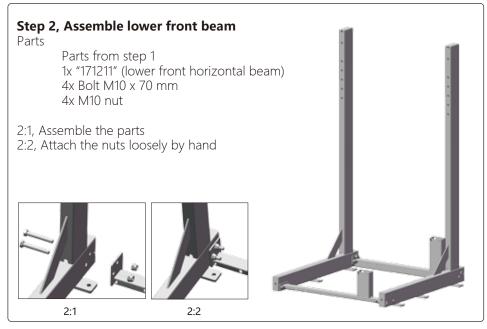

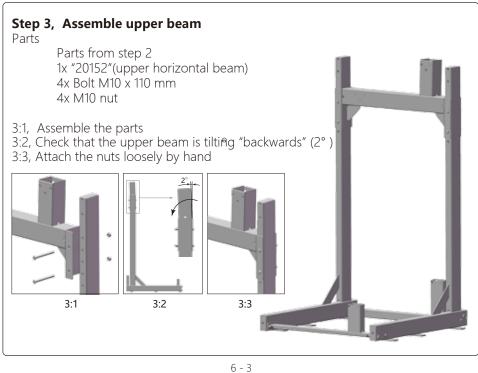

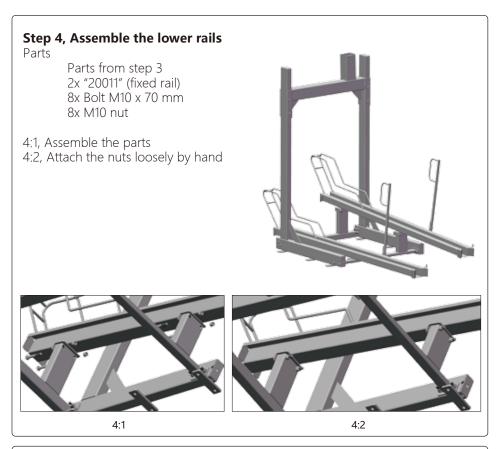

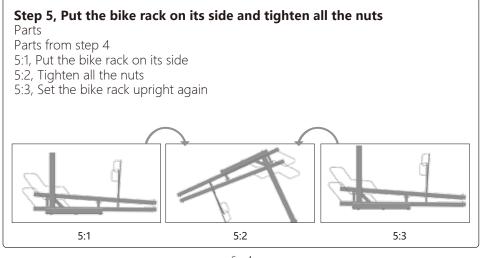

6 - 4

## Step 6, Bolt the bike rack to the floor

Parts

Complete bike rack at least 6x bolt, depending on the floor material





## **Step 7, Assemble the upper rails**

Parts

Parts from step 5 2x "20005" (extendable rail) 6x Bolt M10 x 110 mm

6x M10 nut

7:1-7:2, Assemble the parts

